

Product code: 10072A0000

# **PISTOLET SQUELETTE**

## **DESCRIPTION**

PISTOLET SQUELETTE is a manual dispenser for the extrusion of one-component sealants and bonding products packed in cartridges.

### AREAS OF APPLICATIONS

User-friendly and lightweight, PISTOLET SQUELETTE allows an easy dispensing of one-component adhesives and sealants ranging from low to medium viscosity. It is designed for use with aluminum or PE cartridges (from 280 to 310 ml).

## **TECHNICAL DATA**

Nature of the materials	Body, trigger and rod in steel Aluminium handle
Dimensions	Inner diameter: 50 - 51 mm Maximum cartridge length: 218 mm
Thrust ratio	7:1
Thrust force	1 400 N
Weight	Approx. 420 g
Advantages	Easy handling Lightweight

## **INSTRUCTIONS FOR USE**

Hold the trigger on the back of the dispenser to unlock the metal rod. Manually pull the rod back, check that it is not loose and still straight to avoid pushing crooked during use.

- Aluminum cartridges: pierce the seal of the aluminum cartridge and remove, if there is one, the "easy-opening" protection system.
- PE cartridges: cut the tip of PE cartridges with a suitable tool.


Introduce the cartridge equipped with a cannula into the dispenser (first introducing the cannula into the stopper) then press the handle to set in motion the metal rod which, by pushing on the piston, will put the cartridge into contact with the stopper and allow the extrusion of the product.

Push the trigger at the back of the dispenser to stop the flow of the product.

Do the reverse to remove the cartridge from the dispenser.

Make sure to keep the dispenser clean to give it a better lifespan.

1	Trigger
2	Body
3	Metal rod
4	Stopper
5	Handle

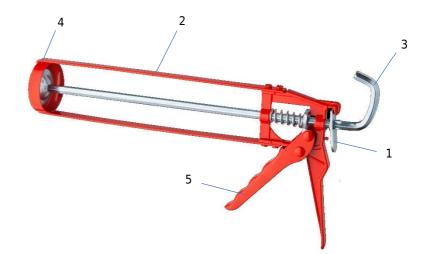

## **PACKAGING**

Sold by 24 units.

The technical data contained herein is based on our present knowledge and experience and we cannot be held liable for any errors, inaccuracies, omissions or editorial failings that result from technological changes or research between the date of issue of this document and the date the product is acquired. Before using the product, the user should carry out any necessary tests in order to ensure that the product is suitable for the intended application. Moreover, all users should contact the seller or the manufacturer of the product for additional technical information concerning its use if they think that the information in their possession needs to be clarified in any way, whether for normal use or a specific application of our product.

possession needs to be clarified in any way, whether for normal use or a specific application of our product.

Our guarantee applies within the context of the statutory regulations and provisions in force, current professional standards and in accordance with the stipulations set out in our general sales conditions.

The information detailed in the present technical data sheet is given by way of indication and is not exhaustive. The same applies to any information provided verbally by telephone to any prospective or existing customer.