



Product code : 7B005L

## EMFIMASTIC SANITAIRE N TRANSLUCENT

### DESCRIPTION


EMFIMASTIC SANITAIRE N TRANSLUCENT is a solvent-free, low modulus multipurpose one component alkoxy silicone sealant based on polysiloxanes and a neutral moisture curing system.

EMFIMASTIC SANITAIRE N TRANSLUCENT has CE marking for the application sealant for sanitary joints according to European Standard EN 15651-3 (S).

### AREAS OF APPLICATIONS

EMFIMASTIC SANITAIRE N TRANSLUCENT is specially designed for sanitary applications (wet rooms...)

EMFIMASTIC SANITAIRE N TRANSLUCENT has a good adhesion without primer on most of materials used in building industries : glass, aluminium, steel, stainless steel, anodised steel, ABS, tiles, treated wood and PVC.

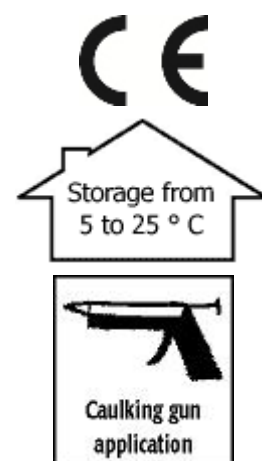

### ADVICE

See also material safety data sheet

### TECHNICAL DATA

Appearance	Pasty
Color	Colourless, translucent
Density at 20°C	1.00
Application temperature	5 to 40 °C
Skin formation time at 23 °C and 50 % HR	30 ± 10 min
Final Shore A hardness (ISO 868 - 3 seconds)	16
Temperature resistance	-40 to +120 °C
Specific data	Odour : weak Modulus at 100 % (DIN 53504) : 0.35 MPa Elongation at break (DIN 53504) : 500 % Modulus at break (DIN 53504) : 1.20 MPa

### INSTRUCTIONS FOR USE

Substrate preparation :

The substrates must be clean, dry, free of dust, oil, grease and any contaminants that could harm bonding. They may be cleaned with alcohol, methylethylketone (MEK), acetone or EMFICLEAN AL cloth.

Use a primer if necessary.

Check the compatibility of the solvent used with the substrates.

If necessary, rub down metal surfaces beforehand. Clean them after rubbing down.  
Allow the substrate to dry after degreasing.

It is recommended to clean concrete with a metal brush and to degrease PVC, glass or aluminium with EMFICLEAN AL cloth.

When using solvents, extinguish all sources of ignition and carefully follow the safety and handling instructions given by the manufacturer or supplier.

Caulking :

EMFIMASTIC SANITAIRE N TRANSLUCENT can be applied by a manual or pneumatic gun.

After application, use a wet putty knife to smooth the joint.

Do not apply at a temperature under 5 °C.

In cold weather, store the cartridges at about 20 °C before use.

Cleaning :

Tools can be cleaned with white spirit or with EMFICLEAN AL cloth before curing.

After curing, remove mechanically.

## CONSUMPTION

300 ml cartridge

Tube (mm)	2	3	4	5	6	7	8	9	10
Length of cord (m)	95	42	24	15	10,5	7,5	5,5	4,5	3,5

## STORAGE AND SHELF LIFE

12 months in the original, hermetically sealed cartridges between 5 and 25 °C

## PACKAGING

300 ml cartridges.

Contact us for other packaging options.

## SAFETY

Read the material safety data sheet.

## PRECAUTIONS FOR USE

EMFIMASTIC SANITAIRE N TRANSLUCENT is not fit for aquariums. For such works, it is recommended to use EMFIMASTIC + SILICONE VITRE.

EMFIMASTIC SANITAIRE N TRANSLUCENT must not be painted.

The technical data contained herein is based on our present knowledge and experience and we cannot be held liable for any errors, inaccuracies, omissions or editorial failings that result from technological changes or research between the date of issue of this document and the date the product is acquired.

Before using the product, the user should carry out any necessary tests in order to ensure that the product is suitable for the intended application. Moreover, all users should contact the seller or the manufacturer of the product for additional technical information concerning its use if they think that the information in their possession needs to be clarified in any way, whether for normal use or a specific application of our product.

Our guarantee applies within the context of the statutory regulations and provisions in force, current professional standards and in accordance with the

stipulations set out in our general sales conditions.

The information detailed in the present technical data sheet is given by way of indication and is not exhaustive. The same applies to any information provided verbally by telephone to any prospective or existing customer.